

Fab Pole

Aerial Fabric & Vertical Pole



FabPole™ and L’Ru Studios LLC company disclaimer and customer warning: FabPole™, pole silks, aerial fabric, aerial silks, vertical pole, pole dancing, acrobatics, aerial activities, dance and fitness are dangerous and strenuous activities and involve the risk of physical injury and/or death. You understand that you may sustain physical injury and/or death while engaging in such activities and that you should check with your physician before engaging in these activities. The purchaser and/or user of the Nexus Wrap™ with Sling System™ and FabPole fabric for any or a combination of activities above understands the risk and agrees that L’Ru Studios, LLC and/or its officers, directors, members, employees, trainers, coaches, instructors, agents, and lessors collectively are not liable for any physical injury and/or death caused during these activities. By purchasing or using aerial equipment, including, but not limited to, vertical poles, fabric, carabiners, swivels, slings, runners, daisy chains and any other forms of equipment, the purchaser or user agrees that FabPole™ and L’Ru Studios LLC is not liable for any damage, injury, or death caused during the use of aerial equipment and/or aerial dance, acrobatics activities and/or any other activities or equipment. FabPole™ and L’Ru Studios LLC advise that you consult and/or hire a professional aerial coach for instruction. It is recommended that a professional rigger be hired for installation of these and all aerial apparatus. FabPole™ fabric/silks should only be used for FabPole activities and dance. You should never use this product for aerial activities or acrobatics.

THE USE OF THESE PRODUCTS AND PROCEDURES IS DOING SO AT YOUR OWN RISK.

Nexus Wrap™ with Sling System™
Video & PDF Instructions
<https://www.fabpole.net/faq>



1. Wrap the Nexus Wrap™ securely around the pole and secure the hook and loop straps at the preferred height.



2. Use a Girth Hitch to attach the Nylon Sling to the Nexus Wrap™.



3. Fold the fabric in half. Insert the folded/loop end of the fabric through the ring.



4. Wrap the top loop over the ring and pull the ring through the top of the loop.



5. Attach the carabiner to the ring.



6. Attach the carabiner to the Nylon Sling.



7. Apply your weight or a good tug downward to the fabric to ensure the attachments are secure. Periodically check for damage and that the Sling System™ and Nexus Wrap™ are secure.



Helpful Tips:

- **Periodically check for damage and that the Sling System™ and Nexus Wrap™ are secure.**
- **To avoid damage to the Nexus Wrap do NOT let the sling touch the hook and loop**
- **“How To” shorten fabric/silks @ :55 of the instruction video.**
- **The ring may leave a mark on lighter fabrics.**
- **Clean your Nexus Wrap with Alcohol, water or soap and water.**
- **Washing and drying fabric – use powder detergent without fabric softeners, gently wash cycle, cold water. Untangle before butting in dryer, dry on low until almost dry, remove and untangle.**

FabPole products such as the NWSS go through a quality control check for any defects. We would be happy to replace or repair the product for defects not caused by incorrect use and/or normal wear for up to 6 months from the purchase date. See terms and conditions at <https://www.fabpole.net/terms>



www.FabPole.net
 (303) 523-3703